



C63 ECU Removal Guide



That's the ECU housing.

Now there are only 3 clips holding it in place that are here:



Pop the clips (the middle one pulls up). then pull the entire plastic cover straight up towards the sky.

Then, you see the ECU:



Then you need to pull out the 2 connectors. On the outside of each of these connectors is a big sideways T shaped PULL TAB. Just pull it out gently about 1-2 inches) and this will safely unlock AND pull out the connector:





Once this is done, all you need to do is pull out the ECU. It is not held in place by screws but rather slipped into 4 rubber mounts (1 on each corner):



Remember to wrap and package the ecu well before shipment. You also want to insure the package for \$2000.

Shipment address:

Eurocharged Performance

2121 Brittmoore Road, Suite 4700 Houston, TX, USA 77043

Tel: (281) 398-9700